

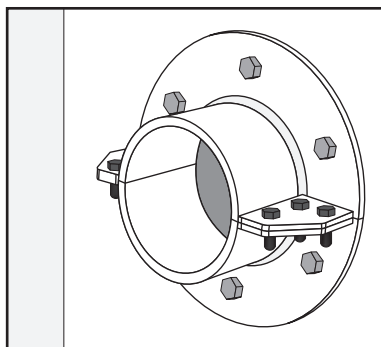
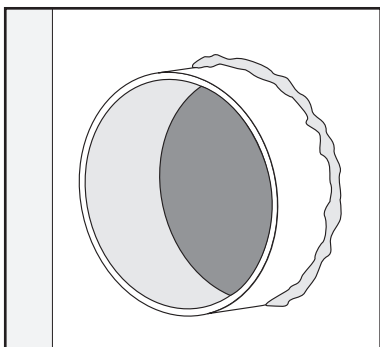




ROUND EMC HRTO/HRT Installation and inspection checks guidelines:

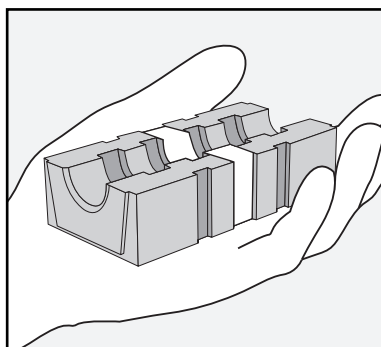



Check that HTS Sleeve has been used in the installation, that it has been properly installed (welded/ bolted) and that it has not mechanical or corrosion damage.

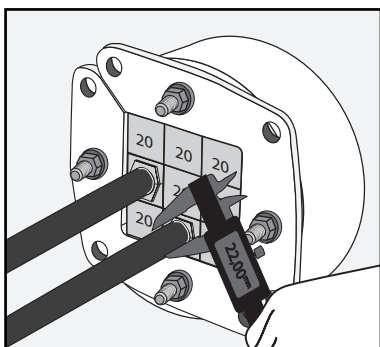



Measure the outer diameter of the cable and ensure that diameter is within the cable/pipe range marked on the front of the block.

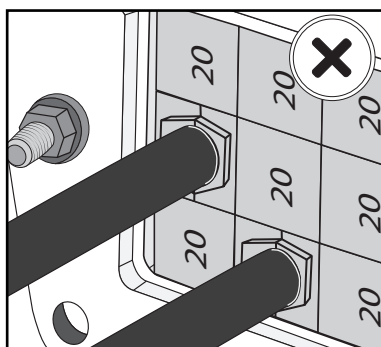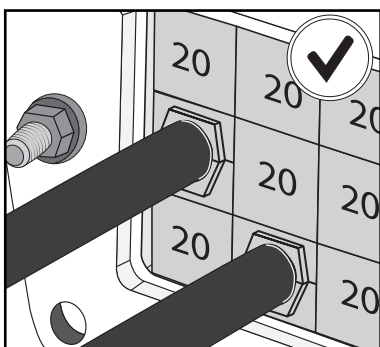

Check the correct orientation of the blocks.

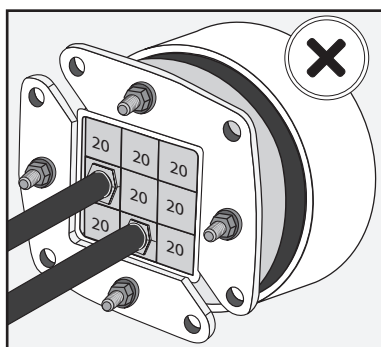
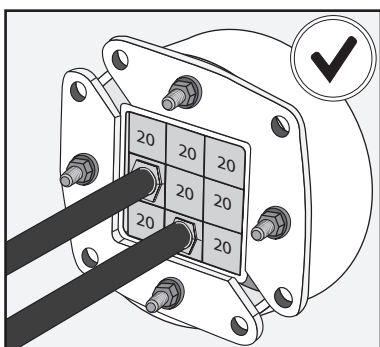


Check that the HRT/HRTO is completely inserted in the Sleeve/Aperture.

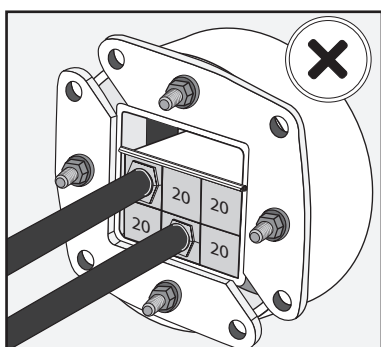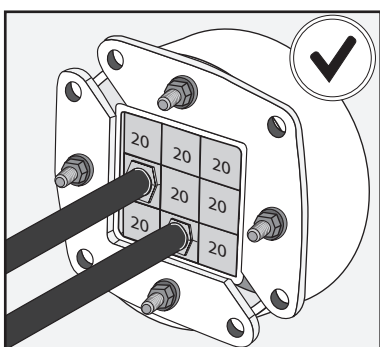



Check that stayplates have not be used in the installation.

Check that HTS Lubricant has been used during the installation.

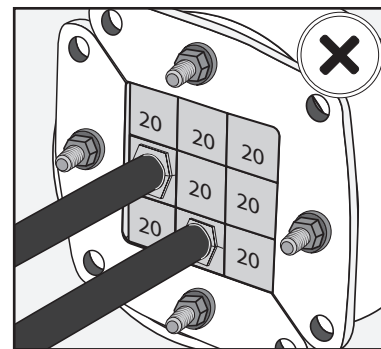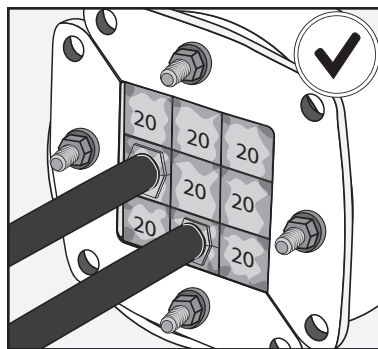


Check that front plates have been closed.

Check that marks in all the cables are visible to be guarantee blocks and cable copper tapes are aligned.

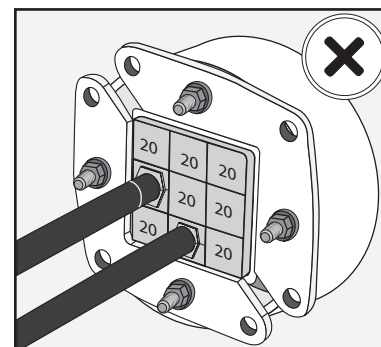
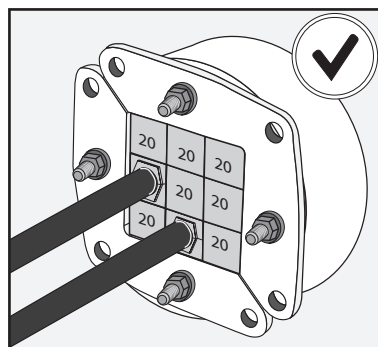


Check that there are sufficient blocks installed into the frame to cover the sealing area defined for each size of frame.

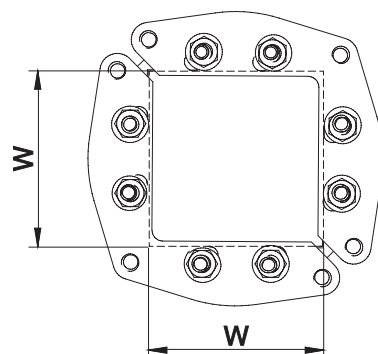

TYPE	SEALING AREA (mm)
HRT0-30	15x15
HRT0-40	20x20
HRT0-50	30x30
HRT0-70	40x40
HRT0-100	60x60
HRT0-125	80x80
HRT0-150	90x90
HRT0-200	120x120

Check that the right tightening of the bolts have been performed (approximately 10 mm of thread on each bolt should protrude from the nut).

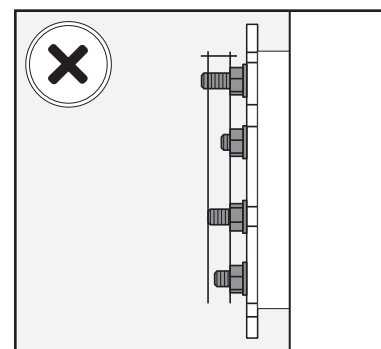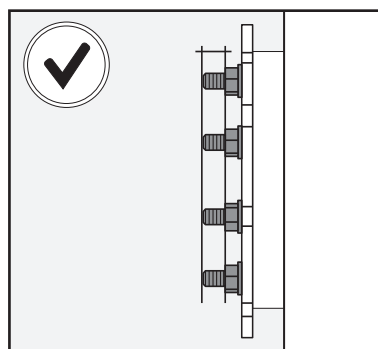

Notes

Leave the system at least 24 hours before apply pressure.

Check that there are sufficient blocks installed into the frame to cover the sealing area defined for each size of frame.