

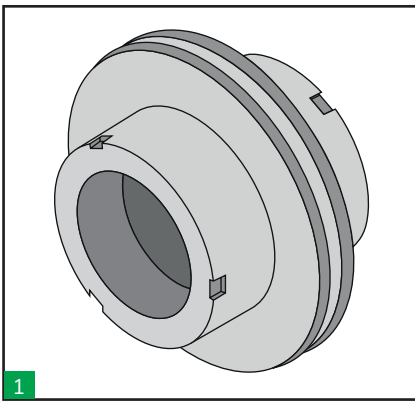




→ **CBT** Installation guide:

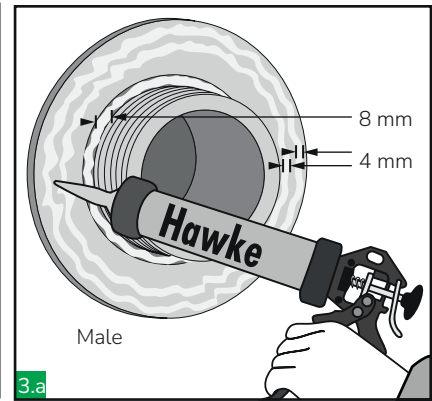


Open the threaded sleeve.

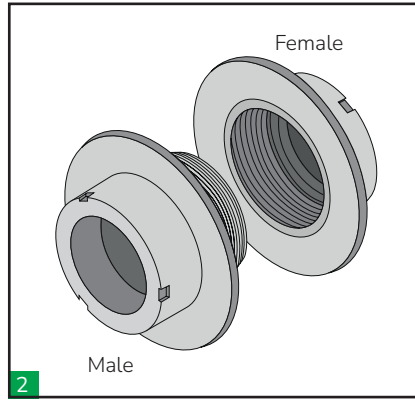

Apply HTS Fire Resistant Silicone on both flanges to be in contact with the bulkhead/deck following above instructions.

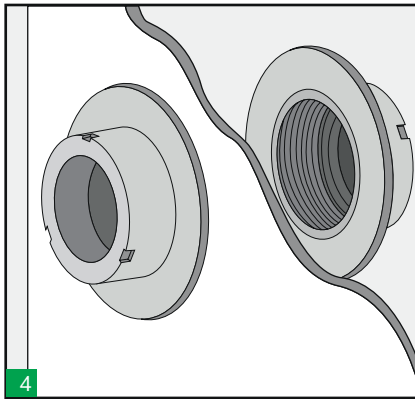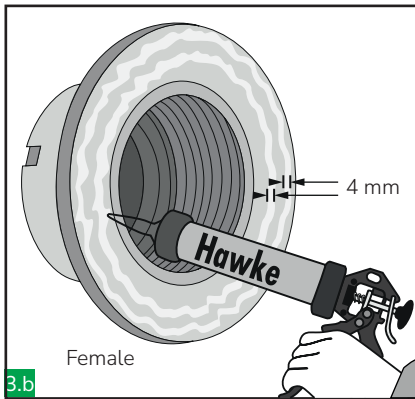

Insert the sleeve into the pre-cut hole in the bulkhead and begin tightening both pieces.

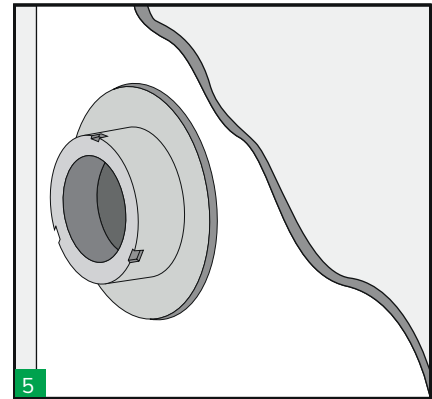

Tighten both pieces firmly. Use a hook wrench if necessary. Once tightened, remove excess of silicone.