



→ **CBT** Installation guide:

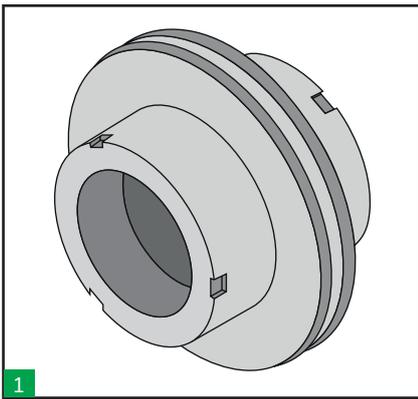


1

Open the threaded sleeve.

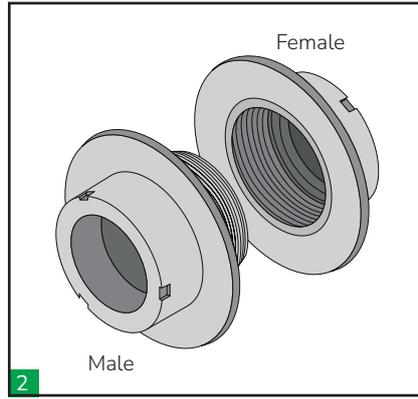


2

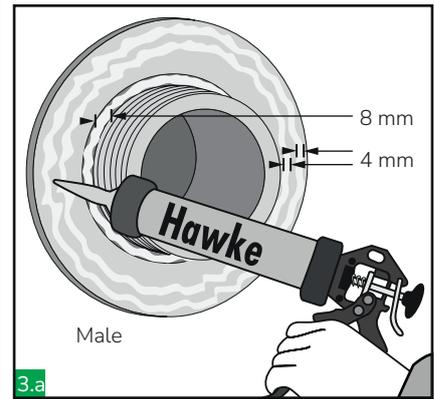


3.a

Apply HTS Fire Resistant Silicone on both flanges to be in contact with the bulkhead/deck following above instructions.

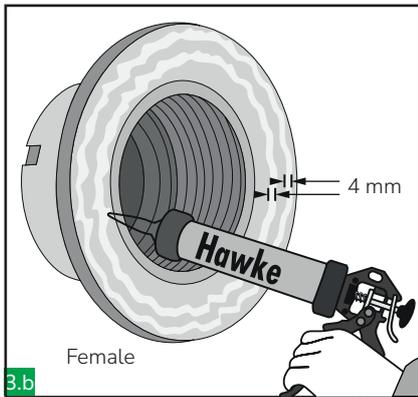


3.b

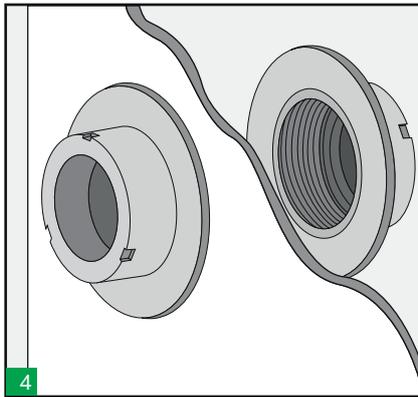

4

Insert the sleeve into the pre-cut hole in the bulkhead and begin tightening both pieces.

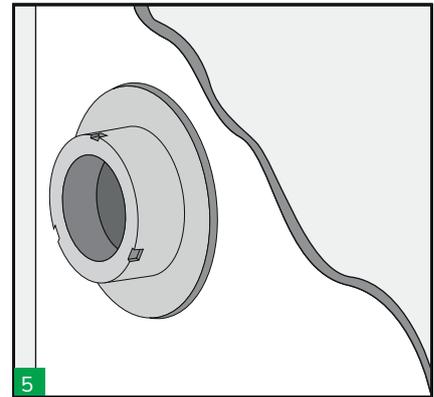

5

Tighten both pieces firmly. Use a hook wrench if necessary. Once tightened remove excess of silicone.